


Parts List	
ITEM	DESCRIPTION
1	SPIDER PLATE
2	BUTTON
3	BRAKE PLATE WASHER
4	LOCKING NUT
5	1/4-20 ADJUSTING SET SCREW
6	BRAKE PLATE

STEP #1 LOOSEN #4(LOCKING NUT) WITH A 5/32 WRENCH

STEP #2 SCREW BOTH OF #5(ADJUSTING SCREW) DOWN UNTIL IT STOPS USING A 1/8 ALLEN WRENCH.

STEP #3 BACKOFF BOTH #5's EQUALLY UNTIL SHAFT TURNS SMOOTH WITHOUT KNOCKING.

STEP #4 WITH ALLEN WRENCH IN PLACE TIGHTEN LOCKING NUTS

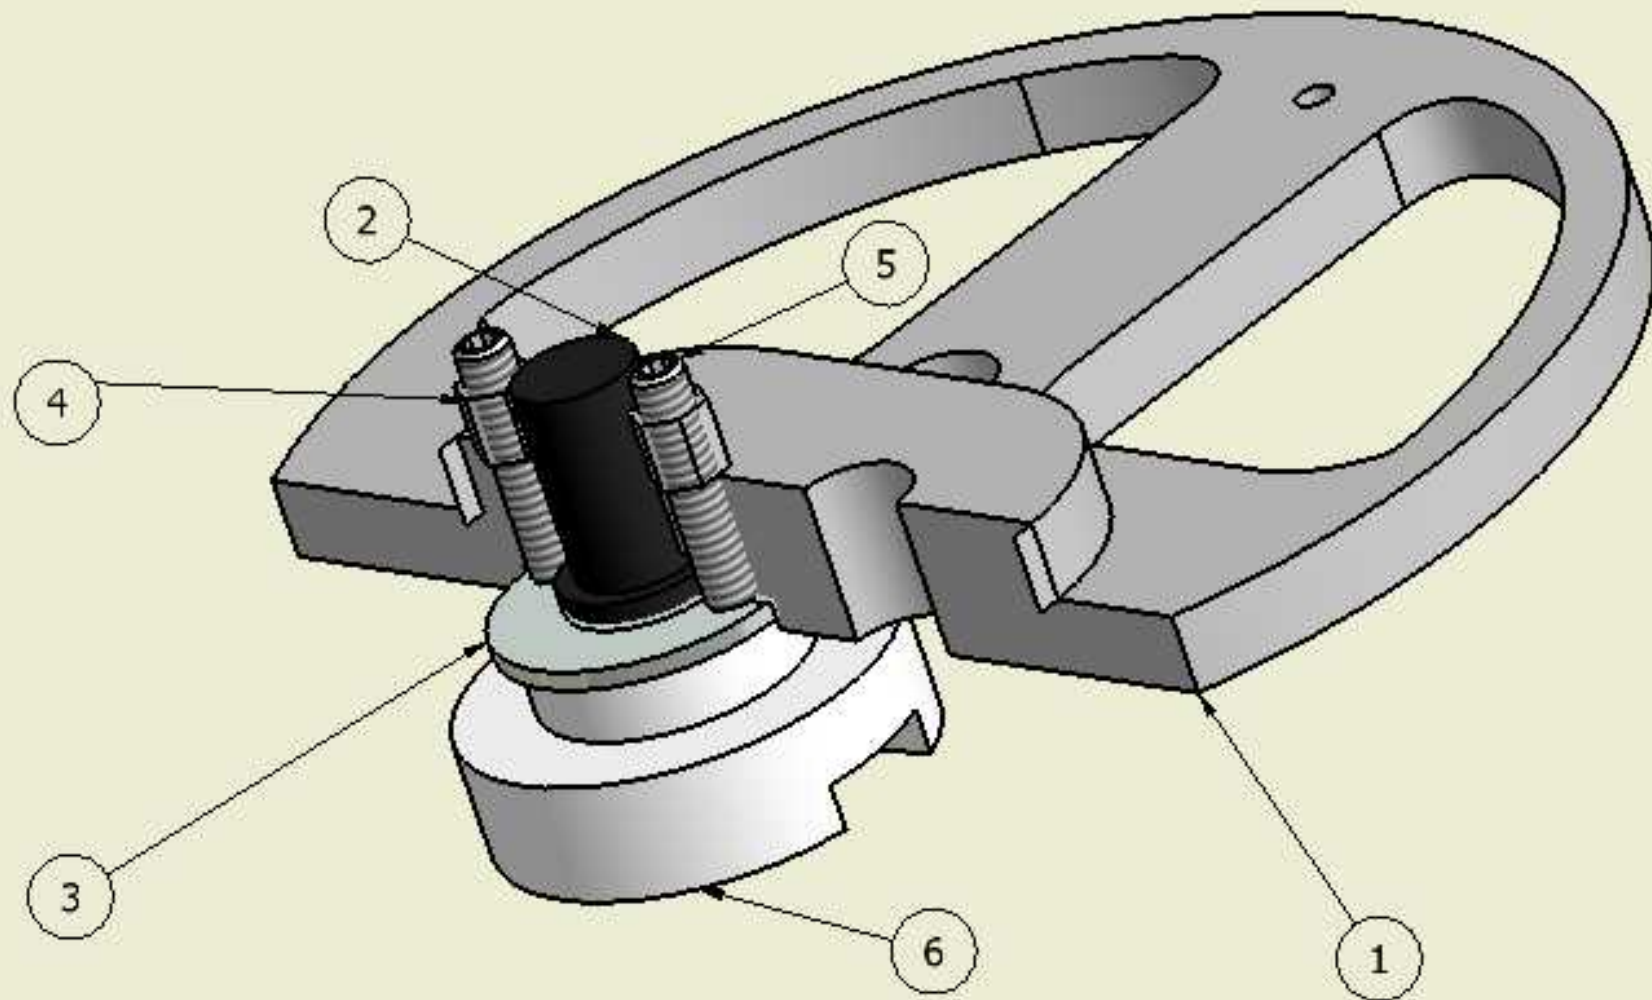

DRAWN BY:

DM

JUNKIN SAFETY APPL. CO.
3121 MILLERS LN
LOUISVILLE KY 40216

PT #

ADJUSTMENT DESCRIPTION

DATE

5/12/10

MATERIAL